

Chocolate pager CTP300 Manual

1. Numeric Transmitter & Charger CTB200 Features

CTB200 is a transmitter and also a charger. It has an antenna that can transmit the signal further. Moreover, It has 16pcs buttons to call corresponding 16pcs pagers and can charge 16pcs pagers at one time.

- ★Key life: million and above;
- ★Operating temperature: 0-55℃;
- ★Power supply: DC 7.5V, 2A, be equipped with adapter;
- ★Transmitter Distance: 300~500 meters (open area);
- ★Material: ABS plastic;
- ★Size : 140X 210 X 35mm;
- ★Frequency: 433.92mhz

2. Chocolate pager CTP300 Features

- ★Operating temperature: 0-55℃;
- ★Power supply: Built-in battery, be charged by CTB200
- ★Material: ABS plastic;
- ★Size : 55X 105 X 10mm;
- ★Frequency: 433.92mhz

3. Key Function

- 1) Alert mode: Flash, Bell, Vibration; Flash is a required mode. Bell and

Vibration is optional.

- 2) There is a hole at the top of pager; you can use a rope to make the pager easy to carry.
- 3) User friendly: Just press the number button of CTB200 to call the corresponding pager.
- 4) Intelligent search function: when all pagers is charging, press the number button, the corresponding pager's top light will flash. you can find the pager you need.
- 5) Power-saving design: under Ideal Condition, battery standby time is 20 days. Battery service life can be beyond 10 years.

4. Setting parameters

1) Setting of Prompt Mode. There are 4 kinds of alert mode combination:

- ①Flash, Bell, Vibration
- ②Flash, Vibration
- ③Flash, Bell,
- ④Flash

Put the switch on OFF position, press and hold "stop" button till you change the switch to "ON" position. If the mode is not your need, Do from the beginning "put the switch on "OFF" again..." .

Notice: Every time when you set the pager's calling number, prompt mode will automatically return to combination ①Flash, Bell, Vibration.

- 2) Set the pager's calling number:

Before delivery, the pagers are already set, you can use them directly.

If you want to change the pager's calling number, you can follow these.

Remove the front plastic sheet of the pager, you will see a built-in button, use a pen point to press the button, then 3pcs indicator lamps light up at same time, it means you can set the pager's number. Now press the number button on CTB200, pager's lamps light out, it means setting is successfully done.

3) Ways to stop the prompt

- ① Press the "stop" button on the pager.
- ② Or put the pager on the rechargeable base

5. Note: In order to extend the battery's service life, please put the switch in OFF position, when not in use.

6. The warranty

We provide 1 month replacement and 15 months maintenance warranties.

Products can be replaced during the first month or maintained for the first year.

This warranty covers defects in manufacturing that arise from the correct use of the device. It is limited to defects in materials or workmanship and does not cover damage caused by abuse, misuse, unauthorized modification, lightning or power surge damage, extreme heat or cold and corrosive environments.

The warranty also does not cover the normal wear and tear on covers, cases, housing, connectors and accessories. The warranty does not apply to any product with a missing, altered, or defaced serial number.